

Z4C Datasheet

Overview

The Cisco Meraki Z4C teleworker gateway is an enterprise class firewall, VPN gateway and router. This device offers wireless connectivity with WiFi 6, five gigabit ethernet ports, including a built-in PoE-enabled port for VoIP phones and other PoE powered devices. The Z4C is designed to securely extend the power of Meraki cloud managed networking to almost any location. With a built-in LTE modem, the Z4C simplifies any deployment that requires a backup cellular uplink, or is positioned in a remote location.

[Top down photo of the Z4 with antennas attached to the back.](#)

Features

Software Features

- Managed via Cisco Meraki Dashboard
- Automatic Firmware upgrades
- L3/L7 Stateful Firewall
- 1:1 and 1:Many NAT
- Configurable VLANs / DHCP support
- Static Routing
- Client VPN endpoint
- Meraki AutoVPN and IPSec VPN endpoint
- Custom Traffic Shaping
- Historical Client Usage statistics
- Netflow support
- Syslog integration
- Remote Packet Capture tools
- IPv6 Support
- 802.1X wired and wireless support

Hardware Features

- Built-in WiFi 6 Wireless Capabilities
- Built-in PoE+ capabilities
- Built-in LTE Cellular capabilities

Context and Comparisons

Z4C

Single Wired WAN Uplink

Yes

Cellular Uplink	Yes
Stateful Firewall Throughput	500 Mbps
Maximum VPN Throughput	250 Mbps
Security Throughput	300 Mbps
PoE Capabilities	Yes, 1x GbE RJ45 LAN Ports (802.3at)
WiFi	Dual-band 2x2 WiFi 6
Backup Cellular Uplink	Built-in CAT12 LTE Modem with 2x External LTE Antennas
Recommended use case	Up to 15 devices

Technical Breakdown

WAN Interfaces

Z4C

1x Dedicated GbE RJ45

1x Built-in CAT12 LTE Modem

LAN Interface

Z4C

4x Dedicated GbE RJ45

802.11 Wireless Interface

Z4C

Radio Information 802.11a/b/g/n/ac/ax (2.4 or 5Ghz) 2x2 MU-MIMO

Antennas 2 x 2 MU-MIMO with two spatial streams

Maximum Data Rate 1.5 Gbps*

* Refers to maximum over-the-air data frame rate capability of the radio chipset, and may exceed data rates allowed by IEEE 802.11ax operation.

Signal Coverage Patterns

5GHz WiFi

5GHz signal coverage patterns on the X-Y plane.

5GHz signal coverage patterns on the X-Z plane.

5GHz signal coverage patterns on the Y-Z plane.

2.4 GHz WiFi

2.4GHz signal coverage patterns on the X-Y plane.

2.4GHz signal coverage patterns on the X-Z plane.

2.4GHz signal coverage patterns on the Y-Z plane.

Throughput and Capabilities

Z4C

Recommended Use Case Up to 15 devices

Max Stateful Firewall Throughput in NAT mode 500 Mbps

Max VPN Throughput 250 Mbps

Physical

Z4C

Mount Type Desktop / Wall Mount

Dimensions 7.9 x 4.41 x 1.04 in /
(h x d x w) 200 x 112 x 26 mm

Weight 1.1 lbs / 0.487 kg

Power Supply 50W DC

Power Load (idle/max) 15W / 46W

Operating Temperature 32°F - 113°F
0°C - 45°C

Storage and Transportation Temperature -4°F - 158°F
-20°C - 70° C

Humidity 5% to 95%

Ordering Guide

Model SKU	Description
Z4C-HW	Meraki Z4C Cloud Managed Teleworker Gateway

Accessories

Accessory	Description
MA-PWR-50WAC	Meraki MX Replacement Power Adapter (Z4/C) (50 Watts AC)
MA-PWR-CORD-US	1x AC Power Cable, US plug
MA-PWR-CORD-EU	1x AC Power Cable, EU plug
MA-PWR-CORD-UK	1x AC Power Cable, UK plug
MA-PWR-CORD-AU	1x AC Power Cable, AU plug

Configure your Dashboard Network

The following is a brief overview only of the steps required to add an Z4C to your network. For detailed instructions about creating, configuring and managing Meraki networks, refer to our [Managing Dashboard Networks](#) document. Additional resources can also be found via: documentation.meraki.com.

1. Login to <http://dashboard.meraki.com>. If this is your first time, create a new account.
2. Find the network to which you plan to add your Z4C or create a new network.
3. Add your Z4C to your network. You will need your Meraki order number (found on your invoice) or the serial number of each Z4C, which looks like Qxxx-xxxx-xxxx, and is found on the bottom of the unit. If a license key was purchased at the same time then you should have received it via email.
4. Go to the map / floor plan view and place each Z4C on the map by clicking and dragging it to the location where you plan to mount it.

Warranty

Z-Series Warranty coverage periods are as follows:

Product	Warranty Period	Warranty Information
Z4C	Lifetime	
		The following are considered accessories:
Z4C Accessories 1 Year		SFP Modules, all mounting kits and stands, interface modules, additional power cords

Additional warranty information can be found on the [Return Policy and Requesting a RMA](#) page of the Cisco Meraki website.

If your Cisco Meraki device fails and the problem cannot be resolved by troubleshooting, contact support to address the issue. Once support determines that the device is in a failed state, they can process an RMA and send out a replacement device free of charge. In most circumstances, the RMA will include a pre-paid shipping label so the faulty equipment can be returned.

In order to initiate a hardware replacement for non-functioning hardware that is under warranty, you must have access to the original packaging the hardware was shipped in. The original hardware packaging includes device serial number and order information, and may be required for return shipping.

Meraki Z4C devices have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Troubleshooting

Common Event Log Messages

Common event logs exist for wired, WiFi, and cellular events. As such, no specific Z4C event log entries are required at this time.

For more general information about navigating the Event Log and the types of Events that could be

expected please check out our [Event Log documentation](#).