
Z4 Datasheet

Overview

The Cisco Meraki Z4 teleworker gateway is an enterprise class firewall, VPN gateway and router. This device offers wireless connectivity with WiFi6, five gigabit ethernet ports, including a built-in PoE-enabled port for VoIP phones and other PoE powered devices. The Z4 is designed to securely extend the power of Meraki cloud managed networking to almost any location.



Features

- Managed via Cisco Meraki Dashboard
- Automatic Firmware upgrades
- L3/L7 Stateful Firewall
- 1:1 and 1:Many NAT
- Configurable VLANs / DHCP support
- Static Routing
- Client VPN endpoint
- Meraki AutoVPN and IPsec VPN endpoint
- Custom Traffic Shaping
- Historical Client Usage statistics
- Netflow support
- Syslog integration
- Remote Packet Capture tools
- IPv6 Support
- 802.1X wired and wireless support

Hardware Features

- Built-in WiFi6 Wireless Capabilities
- Built-in PoE+ capabilities

Context and Comparisons

	<u>Z4</u>
Single WAN Uplink	Yes
Cellular Uplink	No
Stateful Firewall Throughput	500 Mbps
Maximum VPN Throughput	250 Mbps
Security Throughput	500 Mbps
PoE Capabilities	Yes, 1x GbE RJ45 LAN Ports (802.3at)
WiFi	Dual-band 2x2 WiFi 6
Recommended use case	Up to 15 devices

Technical Breakdown

WAN Interface

Z4

1x Dedicated GbE RJ45

LAN Interface

Z4

4x Dedicated GbE RJ45

802.11 Wireless Interface

Z4

Radio Information	802.11a/b/g/n/ac/ax 2.4 or 5Ghz) 2x2 MU-MIMO
--------------------------	--



Antennas	2 x 2 MU-MIMO with two spatial streams
-----------------	--


Maximum Data Rate	1.5 Gbps*
--------------------------	-----------

* Refers to maximum over-the-air data frame rate capability of the radio chipset, and may exceed data rates allowed by IEEE 802.11ax operation.


Signal Coverage Patterns



5GHz WiFi

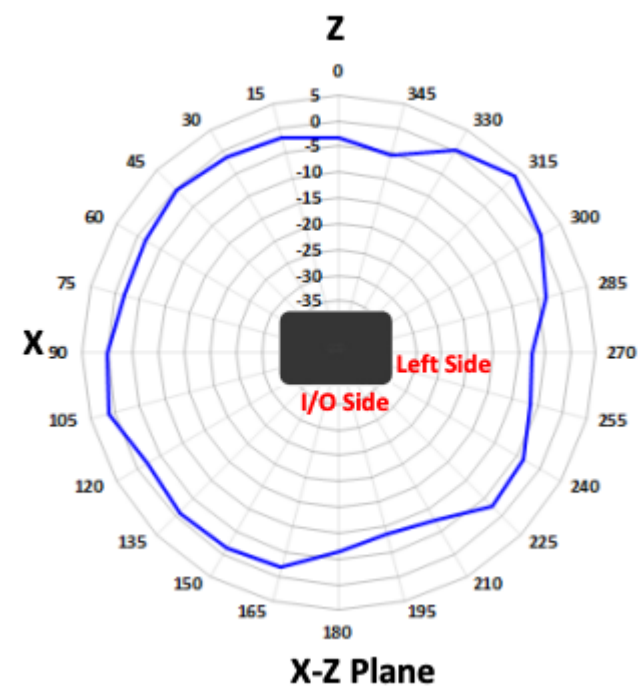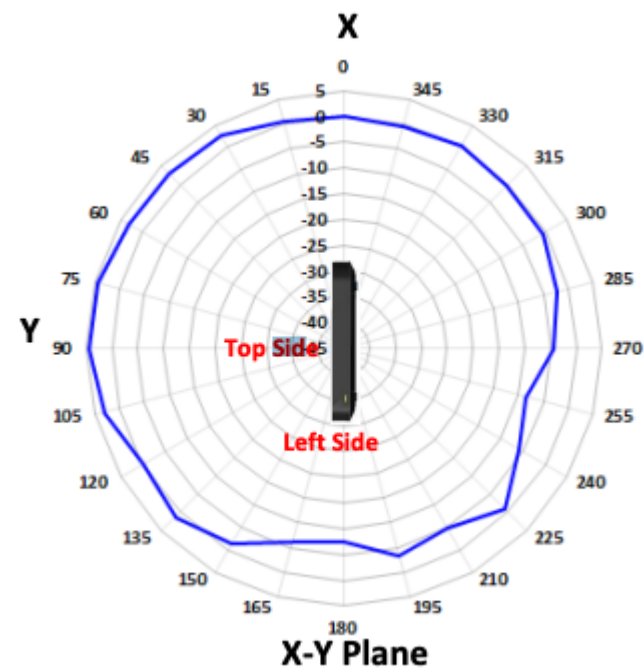

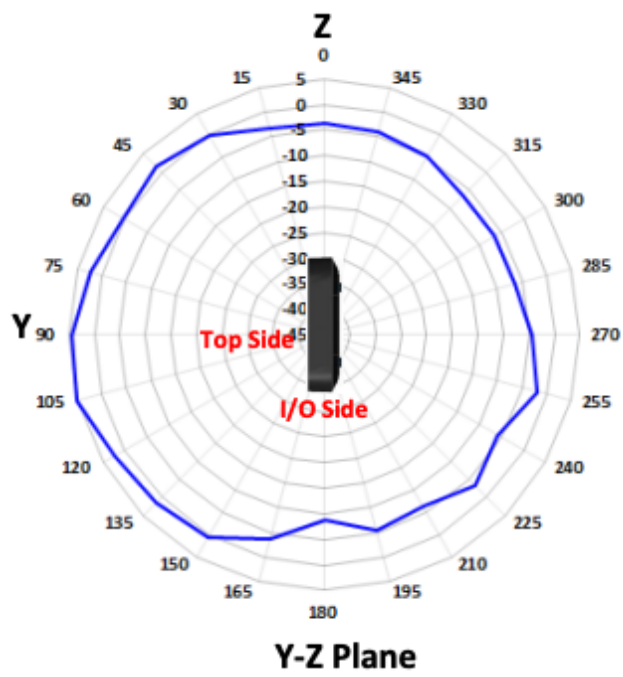

2.4 GHz WiFi

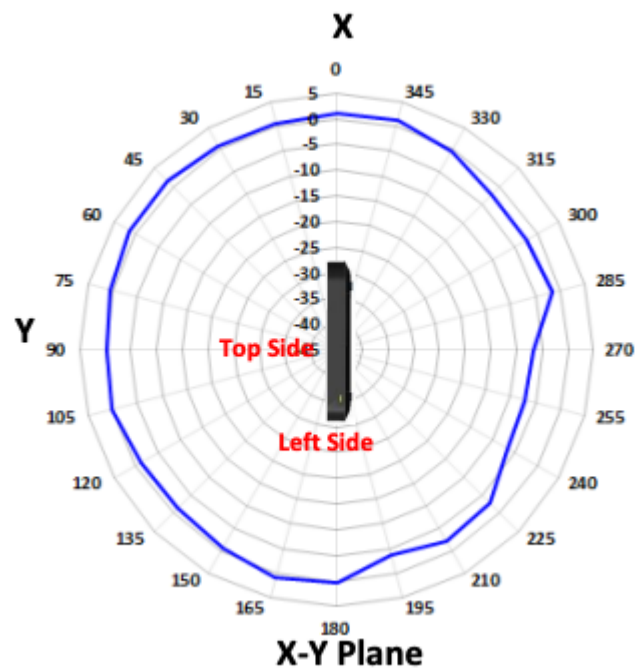

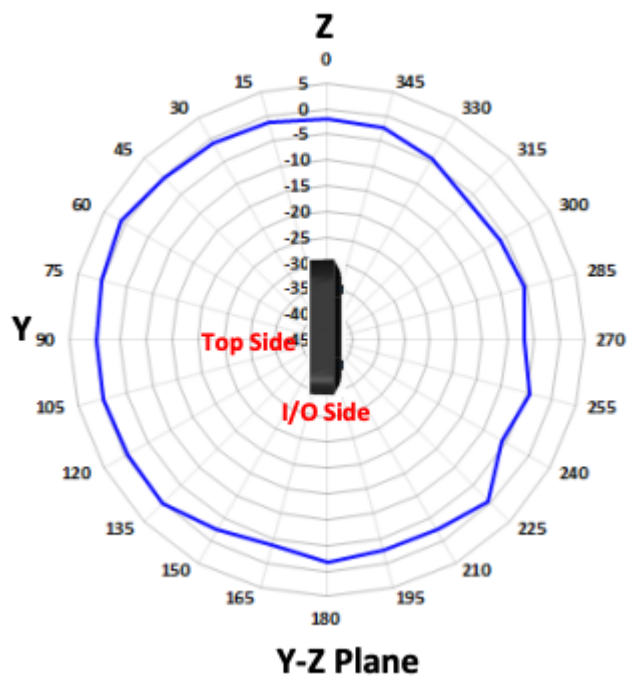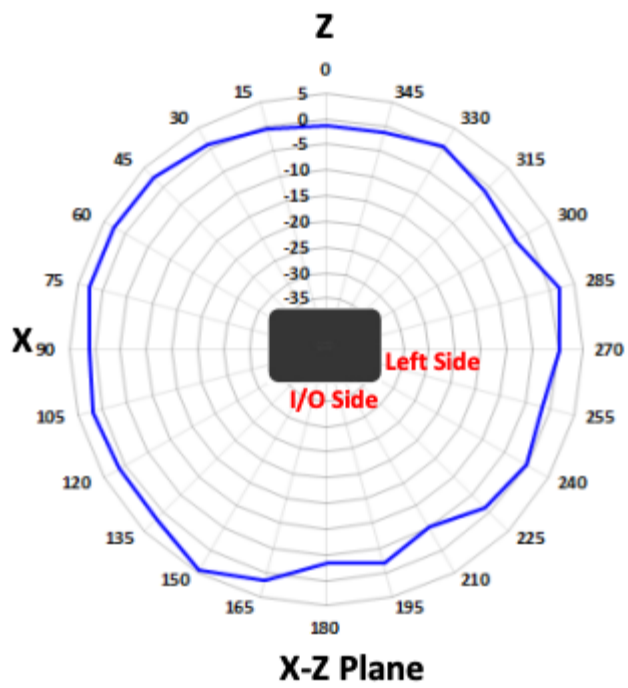

Throughput and Capabilities

Z4

Recommended Use Case	Up to 15 devices
-----------------------------	------------------

Max Stateful Firewall Throughput in NAT mode	500 Mbps
---	----------

Max VPN Throughput	250 Mbps
---------------------------	----------

Physical

Z4

Mount Type	Desktop / Wall Mount
-------------------	----------------------

Dimensions	7.25 x 4.84 x 1.10 in /
(h x d x w)	184.2 x 123 x 28 mm

Weight	0.86 lbs / 0.391 kg
---------------	---------------------

Power Supply	50W DC
---------------------	--------

Power Load (idle/ max)	11W / 42W
-----------------------------------	-----------

Operating Temperature	32°F - 113°F
	0°C - 45°C

Humidity	5% to 95%
-----------------	-----------

Ordering Guide

Model SKU	Description
Z4-HW	Meraki Z4 Cloud Managed Teleworker Gateway

Accessories

Accessory	Description
MA-PWR-50WAC	Meraki MX Replacement Power Adapter (Z4/C) (50 Watts AC)
MA-PWR-CORD-US	1x AC Power Cable, US plug
MA-PWR-CORD-EU	1x AC Power Cable, EU plug
MA-PWR-CORD-UK	1x AC Power Cable, UK plug
MA-PWR-CORD-AU	1x AC Power Cable, AU plug

Warranty

Z-Series warranty coverage periods are as follows:

Product	Warranty Period	Warranty Information
Z4	Lifetime	
Z4 Accessories	1 Year	The following are considered accessories: SFP Modules, all mounting kits and stands, interface modules, additional power cords

Additional warranty information can be found on the [Return Policy and Requesting a RMA](#) page of the Cisco Meraki website.

If your Cisco Meraki device fails and the problem cannot be resolved by troubleshooting, contact support to address the issue. Once support determines that the device is in a failed state, they can process an RMA and send out a replacement device free of charge. In most circumstances, the RMA will include a pre-paid shipping label so the faulty equipment can be returned.

In order to initiate a hardware replacement for non-functioning hardware that is under warranty, you must have access to the original packaging the hardware was shipped in. The original hardware packaging includes device serial number and order information, and may be required for return shipping.

Meraki Z4 devices have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Configure your Dashboard Network

The following is a brief overview only of the steps required to add an Z4 to your network. For detailed instructions about creating, configuring and managing Meraki networks, refer to our [Managing Dashboard Networks](#) document. Additional resources can also be found via: documentation.meraki.com.

1. Login to <http://dashboard.meraki.com>. If this is your first time, create a new account.
2. Find the network to which you plan to add your Z4 or create a new network.
3. Add your Z4 to your network. You will need your Meraki order number (found on your invoice) or the serial number of each Z4, which looks like Qxxx-xxxx-xxxx, and is found on the bottom of the unit. If a license key was purchased at the same time then you should have received it via email.
4. Go to the map / floor plan view and place each Z4 on the map by clicking and dragging it to the location where you plan to mount it.

Troubleshooting

Common Event Log Messages

Common event logs exist for wired and WiFi events. As such, no specific Z4 event log entries are required at this time. For more general information about navigating the Event Log and the types of Events that could be expected please

check out our [Event Log documentation](#).